




# *RaceScale* Instructions

FOR FURTHER TECHNICAL ASSISTANCE CONTACT:  
**TANNER RACING PRODUCTS**  
10 COOPERATIVE WAY  
WRIGHT CITY, MO. 63390  
800-558-4112 / 636-745-7757  
[TannerRacing.com](http://TannerRacing.com)  
[MittlerBros.com](http://MittlerBros.com)

 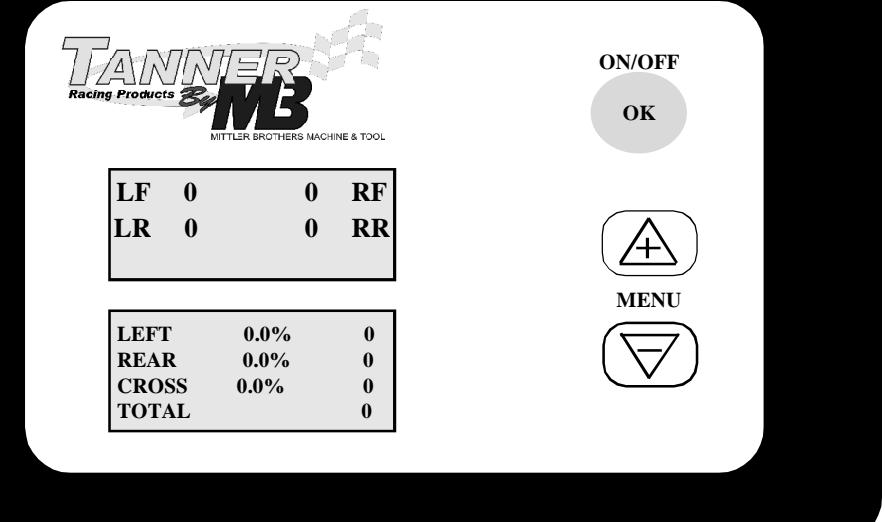


## Button Operation

**On/Off/Ok** Push this button to turn unit ON  
 Push and hold for 2 seconds to turn Unit OFF  
 Select this button as the OK button during the menu functions.



Push this button to enter into the menu.  
 This button will also allow you to scroll up.



Push this button to enter into the menu.  
 This button will also allow you to scroll down.

## Scaling Instructions

1. Set all scale pads out individually.
2. Plug the cables into the scale pads.
3. Turn the Racescales on by pushing the On/Off Button. The scales will turn on and read Tanner Racescales and show you the level of the battery. If the battery is low you may want to charge the unit.
4. ZERO the system by pushing the UP or DOWN Arrow and selecting Zero all pads. If you are not using all pads you may individually Zero each pad. After you highlight the choice on the menu you may select it by pushing the OK button. This will then display zero's on the locations selected.
5. Put your racecar on the scales and the weights will register, the %'s and totals will show on the displays.
6. Shut the scales OFF by pushing the ON/OFF button for 2 seconds and the scales will turn off.
7. Remove the cables from the scale pads and put the unit away. If the racescale needs charging you can plug the AC adapter into the racescale and the battey voltage bar will display on the top display.

If you have any questions or need technical assistance please call 800-558-4112. Thank you and good luck racing.