BATTERY CHARGER: THESE SCALES ARE DESIGNED TO BE USED ON BATTERY POWER AND IT IS BEST TO USE THEM ON BATTERY POWER AND THEN CHARGE THEM WITH THE CHARGER SUPPLIED. EACH BATTERY BAR IS WORTH 2 HOURS OF WEIGHTING TIME. WHEN YOU ARE ON YOUR LAST BATTERY BAR YOU SHOULD CHARGE THE SCALES 12 HOURS TO REGAIN THE FULL CHARGE.

TANNER RACING PROUDUCTS IS THE MFG OF SEVERAL MODELS OF SCALES. THERE ARE MORE FEATURES AVAILABLE ON THE DELUXE SCALES. IF YOU DECIDE YOU NEED TO HAVE MORE FEATURES ON YOUR SCALES, IT IS NOT NECCESSARY TO PURCHASE ANOTHER SET, YOURS CAN BE UPDATED USING THE SAME CIRCUITRY THAT IS ALREADY IN YOURS.

HELPFUL HINTS:

MAKE SURE THERE IS NOT ANY CUT OR SMASHED CABLES

DO NOT PUT 1700LB. OR MORE PER PAD (EXCEPT SPECIAL MODELS)

CHARGE OVERNIGHT ONCE PER MONTH FOR OPTIMUM BATTERY LIFE.

SCALES WILL TAKE 30 TO 45 SECONDS TO TURN ON WITH POWER ADAPTOR IF BATTERY IS LOW. THIS IS FOR POWER SURGE PROTECTION PURPOSES



CONGRATULATIONS ON YOUR PURCHASE OF THE LAST-EST TECHNOLOGY IN RACESCALES

FOR FURTHER TECHNICAL ASSISTANCE PLEASE CON-TACT TANNER RACING PRODUCTS, INC. 215 Clay St. B-2 Auburn, WA. 98001 253-939-1415 FAX 253-939-1416 *RACESCALES MODEL* # 50400

CONGRATULATIONS ON YOUR PURCHASE OF THE LASTEST TECHNOLOGY IN RACESCALES

Take a few minutes to make yourself familiar with your new scale. There are several different buttons and features that we will go thru on the instructions.

Contents:	1 Control Box
	4 Cables
	1 110 volt Charger
	4 Wheel Pads

Buttons Function

ON TURNS THE SCALE ON.

OFF TURNS THE SCALE OFF.

CONTRAST THE UP OR DOWN ARROWS ADJUST THE CONTRAST ON THE SCREEN FROM LIGHT TO DARK.

MENU USED FOR ADDITIONAL OPTIONS.

- MEMORY; ONCE YOU ACTIVATE THE STORE BUTTON THE SCREEN WILL AUTOMATICALLY LEAD YOU THROUGH THE STEPS.
- STORE PUSH THIS BUTTON WHEN YOU WISH TO STORE A MEMORY.
- RECALL PUSH THIS WHEN YOU WISH TO RECALL A MEMORY.
- KEYPAD THE KEY PAD IS FOR MEMORY LOCATION AND USED IN THE DELUXE UPDATES FOR CENTER OF GRAV-ITY AN CALCULATOR

